

WF-204 User Manual



CONTENTS

Product Description.....	1
Features.....	1
Cautions.....	1
Installation Instruction.....	1
Function Keys Instruction.....	1
Operation Instruction.....	2
System Connection	4
Technical Parameters.....	5
Trouble Shooting.....	5

Product Description

This audio intercom system can be used to call, intercom and unlock. It also can be applied to monitor outside, users can hear the sound outside when monitoring. It is a product that is very suitable for villa, single house, hotel and office etc, giving you the combined benefit of security and convenience.

Features

1. No radiation, low power consumption.
2. Waterproof, anti-explosion, anti-oxidation and durable metal alloy panel outdoor unit.
3. Electric lock release function.
4. Outdoor gate lock release function.
5. Monitoring outside, you can hear the sound outside when monitoring.
6. Talking volume adjustable.
7. Two-wire non-polarity twisted pair connection.
8. The indoor unit can be hung on the wall.
9. There are 8 pieces of chord melodies for you to choose.
10. Inner call function.
11. Reconfirmation doorbell can be connected.
12. Main unit or sub unit select function.
13. Room number editable.



Cautions

1. Do not squeeze, crash or drop the products.
2. Do not install the indoor unit in high temperature or high humidity environment.
3. Use the products under the circumstance of barrier-free and no interference.
4. To avoid damages, please install this device on the wall according to the instruction.



Installation Instruction

Indoor unit

1. Use 3*20PA screws to fix the bracket on the wall.
2. Hang the indoor unit on the bracket after finish wire connection, and then connect the enclosed two-core twisted pair cable with the power socket of the indoor unit.

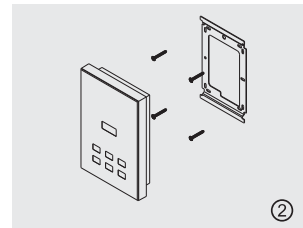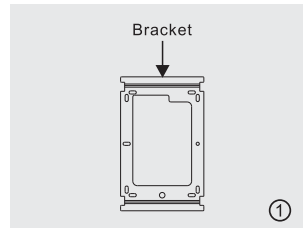

Function Keys Instruction

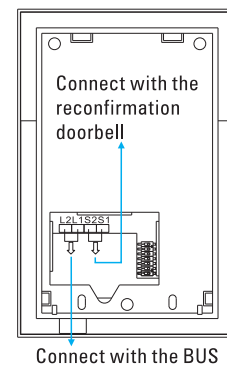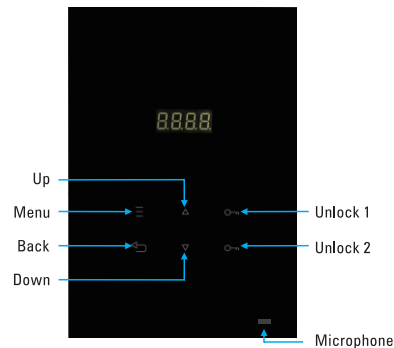

Connecting ports instruction

1. BUS connecting port: connect with the two-core BUS
2. J4 slide switch: Bit 1-5: Room number setting; Bit 6: Video matching switch; Bit 7: Main unit and sub unit setting;
3. Reconfirmation doorbell connecting port: Connect with the normally open switch of the reconfirmation doorbell, press the doorbell button and the reconfirmation doorbell will ring.

Note: When there are video door phone and audio door phone installed in the same household, the video machine and the audio machine cannot be connected to the same splitter.

Operation Instruction

1). Call, intercom and unlock

Press the room number button on the outdoor unit, the indoor unit will ring and it will hang up automatically if the call is not answered in 30 seconds. Press the MENU button on the indoor unit to intercom with the visitor, when it is on talking state, press the BACK button to hang up. When there are two or more indoor units, other indoor units will enter busy state when one indoor unit is on talking state. Press the UNLOCK 1 button to release the lock; press the UNLOCK 2 button to release another lock if two locks are connected to the system.

2). Monitoring

Outdoor unit number not set yet: Press and hold the MENU button for about 2 seconds, a scrolling message "User Set-" will be shown on the LED screen, press the MENU button for 6 times, the outdoor unit number setting menu "6-0x" (x=1~4, x means the number of the outdoor unit) will be shown on the LED screen, then press the UP/DOWN button to select the number of the outdoor unit, press the BACK button to exit after finishing setting. Then press the MENU button on standby status, a scrolling message "User Set-" will be shown on the LED screen, press the UP/DOWN button to select the outdoor unit number "ds-x" (x=1~4, which means the corresponding outdoor unit number) you want to monitor, and then press the MENU button to start monitoring the relative outdoor unit, you can hear the sound outside while monitoring, press the BACK button to exit monitoring state.

Outdoor unit number already set: Press the MENU button once on standby status, a scrolling message "User Set-" will be shown on the LED screen, and then press the UP/DOWN button to select the outdoor unit number "ds-x" (x=1~4, which means the corresponding outdoor unit number) you want to monitor, and then press the MENU button to start monitoring the relative outdoor unit, you can hear the sound outside while monitoring, press the BACK button to exit monitoring state.

3). Intercom with neighbor households

Indoor unit number not set yet: Under standby status, press and hold the MENU button for about 2 seconds, a scrolling message "User Set-" will be shown on the LED screen, press the MENU button for 7 times, the indoor unit number setting menu "7-0X" (X=1~32, X means the number of the indoor unit) will be shown on the LED, then press the UP/DOWN button to select the number of the indoor unit, press the BACK button to exit after finishing setting. Then press the MENU button once on standby status, a scrolling message "User Set-" will be shown on the LED screen, press the UP/DOWN button to select the indoor unit number "C-XX" (XX=01~32, which means the corresponding indoor unit number) you want to intercom with, and then press the MENU button to start calling the corresponding indoor unit, press the BACK button to exit after finish intercom. Indoor unit number already set: Press the MENU button once on standby status, a scrolling message "User Set-" will be shown on the LED screen, press the UP/DOWN button to select the indoor unit number "C-XX" (XX=01~32, which means the corresponding room indoor unit number) you want to intercom with, and then press the MENU button to start calling the corresponding indoor unit, press the BACK button to exit after finish intercom.

4) Inner call

































On standby status, press the MENU button once, a scrolling message "User Set-" will be shown on the LED screen, press the UP/DOWN button to select the inner call menu "ALL" and then press the MENU button to enter inner call status, all the indoor units that connected to the system will ring at the same time, all the other indoor units will stop ringing when one of the indoor units answer the call. (Note: All the indoor units' addresses must be set the same with each other to activate the inner call function.)



5) Setting

On standby status, press and hold the MENU button for 2 seconds, scrolling message "User Set-" will be shown on the LED screen, then press the MENU button to select the mode you want to set, and then press the UP/DOWN button to select the parameters. Press the MENU button to enter next setting one, press the BACK button to exit the menu.


Setting Mode	Led Status	Instruction	Default value
Outdoor Unit Ringtone Setting	1-xx	Set the calling ringtones. There are 8 pieces of ringtones for option (xx=01~08), press the UP/DOWN button to select the ringtone, settings will take effect immediately.	02
Inner Call Ringtone Setting	2-xx	Set the inner call ringtones. There are 8 pieces of ringtones for option (xx=01~08), press the UP/DOWN button to select the ringtone, settings will take effect immediately.	08
The Reconfirmation Doorbell Ringtone Setting	3-xx	Set the reconfirmation doorbell's ringtone. There are 8 pieces of ringtones for option (xx=01~08), press the UP/DOWN button to select the ringtone, settings will take effect immediately.	02
Ringtone Volume Setting	4-xx	The volume can be set from 0 to 9, press the UP/DOWN button to select the volume, settings will take effect immediately.	6
Talking Volume Setting	5-xx	The volume can be set from 0 to 9, press the UP/DOWN button to select the volume, settings will take effect immediately.	6
Outdoor Unit Number Setting	6-0x	Max 4 outdoor units for option, press the UP/DOWN button to select the setting, settings will take effect immediately. Set the outdoor unit that can be monitored by the indoor unit, which is corresponding to the monitoring function on the second part of the operation instruction.	1
Indoor Unit Number Setting	7-xx	Max 32 indoor units can be set, press the UP/DOWN button to select the setting, settings will take effect immediately. Set the indoor unit with the call and intercom function between neighbor households, which is corresponding to the call and intercom between households function on the second part of the operation instruction.	04
Main Unit and Sub Unit Setting	8-dx	0 is the main unit and 1-3 are sub units, press the UP/DOWN button to select the setting, settings will take effect immediately.	0
Factory Default	9-FS	All the user data will be covered when choosing factory default, select "9-FS" and press the UP button, the led will show "yES-" and then press the UP button again, the led will show "SUCC", which means the factory default setting is finished.	-

Address setting
If there is only one indoor unit in each household, the indoor unit should set a unique address. There are 32 addresses can be set in total. Please refer to the following chart for the setting method:

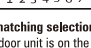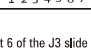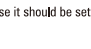Switch setting status	Corresponding Room number	Switch setting status	Corresponding Room number
	Room number 01		Room number 17
	Room number 02		Room number 18
	Room number 03		Room number 19
	Room number 04		Room number 20
	Room number 05		Room number 21
	Room number 06		Room number 22
	Room number 07		Room number 23
	Room number 08		Room number 24
	Room number 09		Room number 25
	Room number 10		Room number 26
	Room number 11		Room number 27
	Room number 12		Room number 28
	Room number 13		Room number 29
	Room number 14		Room number 30
	Room number 15		Room number 31
	Room number 16		Room number 32

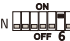Video matching selection
If the indoor unit is on the BUS terminal, then its video matching switch (bit 6 of the J3 slide switch) should be set to ON  , otherwise it should be set to OFF .

System Connection

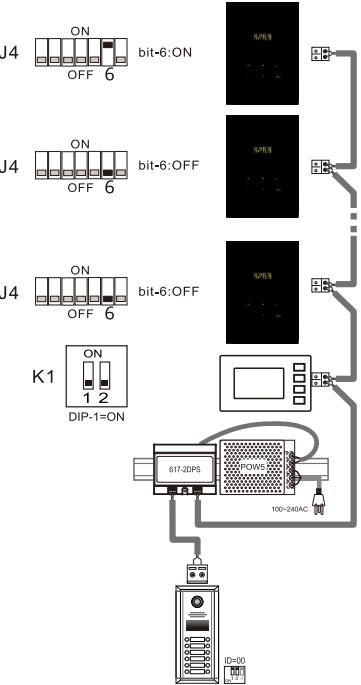

2.One-way output splitters 617-ZD4


Note:
1.The video matching switch setting of the WF-724 is as the J4 slide switch bit-6 shows above, and for the video door phone's video matching switch setting, please see the K1 slide switch bit 1 setting shows in the above diagram.
2.Main unit and sub unit setting of the WF-724: Please refer to the operation instruction. For the video door phone's setting, please refer to the relative user manual for instructions. (Note: Only one main unit can be set in one household.)
3.The setting of the 617-ZD4 splitter that connected to the WF-724 is as below:



4.For the setting of the 617-ZD4 that connected to the video door phone, please refer to the two-wire building system user manual.


1.No splitters

Note:
1.The video matching switch setting of the WF-724 is as the J4 slide switch bit-6 shows above, and for the video door phone's video matching switch setting, please see the K1 slide switch bit 1 setting shows in the above diagram. (Note: The video matching switch should be set to ON if the device is connected at the end of the BUS, otherwise, the switch should be set to OFF.)
2.Main unit and sub unit setting of the WF-724: Please refer to the operation instruction. For the video door phone's setting, please refer to the relative user manual for instructions. (Note: Only one main unit can be set in one household.)

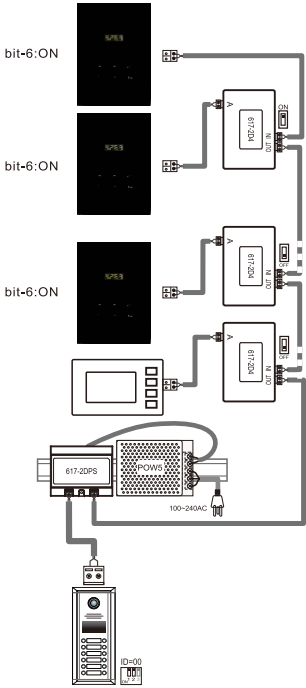


3.Star wiring, four-way output splitters 617-ZD4

Note:
1.When there are video door phone and audio door phone connected to the same system in one household, they cannot be connected to the same one splitter.
2.The video matching switch setting of the WF-724 is as the Bit 6 of the J4 slide switch shows above, and for the video door phone's video matching switch setting, please see the bit 1 of the K1 slide switch setting shows in the above diagram.
3.Main unit and sub unit setting of the WF-724: Please refer to the operation instruction. For the video door phone's setting, please refer to the relative user manual for instructions. (Note: Only one main unit can be set in one household.)
4.Please set the slide switch of the 617-ZD4 splitters that connected with the audio door phone as below:

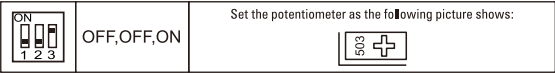

5.For the setting of the 617-ZD4 that connected to the video door phone, please refer to the two-wire building system user manual.

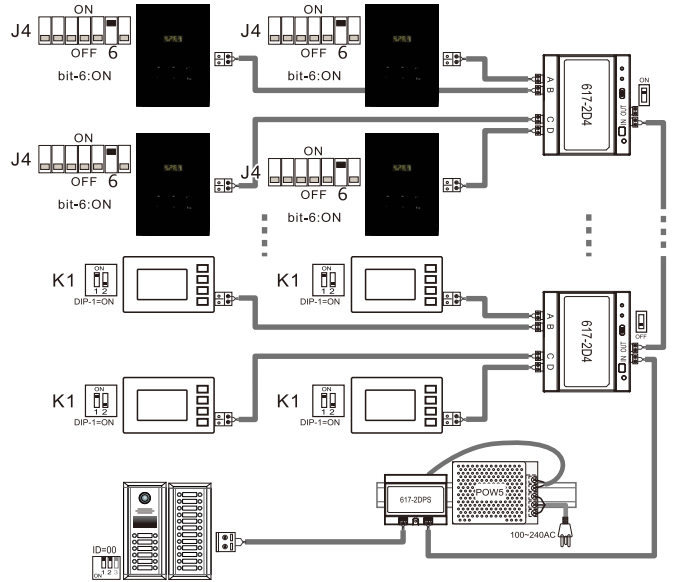

Technical Parameters

Monitoring time	30S ± 10%	Talking time	60S or 120S ± 10%
Working temperature	-10℃ ~ +40℃	Relative humidity	10% ~ 90%(RH)
Outline size	180mm(W) × 120mm(H) × 35mm(D)		
Power consumption	Standby < 0.75W, working < 4W		
Connection	Two-wire non-polarity connection		

Trouble Shooting

Problems	Solutions
Power indicator light not ON after power on	• Please check whether the connection is secure and properly connected.
No audio when calling	• Make sure the volume notch on the indoor unit is turned up. • Make sure there is nothing interfering with the speaker or microphone on the indoor unit or the camera. • Make sure all the connections are secure and properly connected.
The outdoor unit cannot call the indoor one	• Make sure all the connections are secure and properly connected. • Make sure the indoor unit's address are correctly set. • Make sure there is only one indoor main unit.
Door Unlock not Functioning	• Make sure the connections with the locks are secure and properly connected. • Make sure you have the lock wired to a power source which is enough to make it operate.
Both the indoor and outdoor unit cannot hear any sounds when monitoring and intercom not functioning	• Press the TALK button for two-way intercom Since simply press the MONITOR button does not activate the intercom function yet. • Make sure all the connections are secure and properly connected